



# JR-33 TWINPAK

## Changeover Operating Instructions

---

"Bottom" 3-Way Valve

"Top" 3-Way Valve

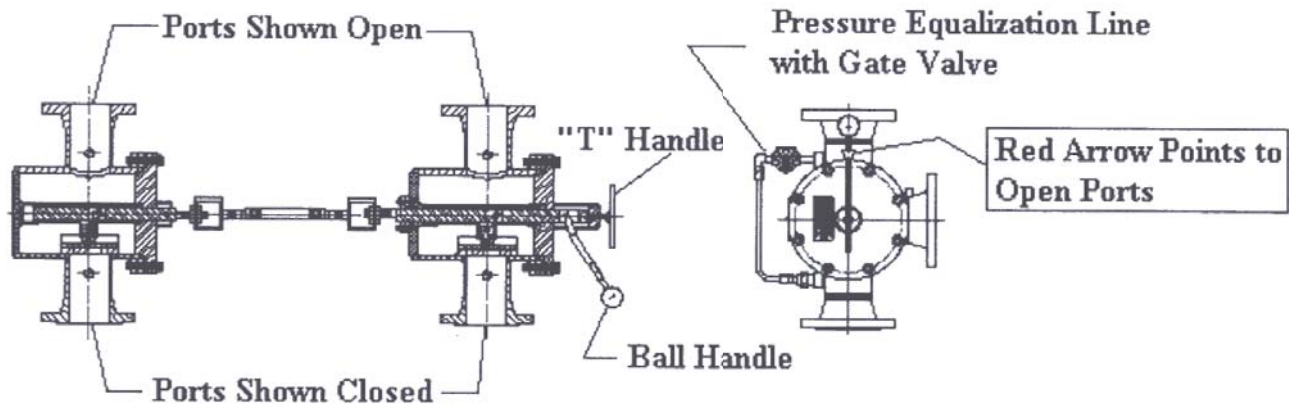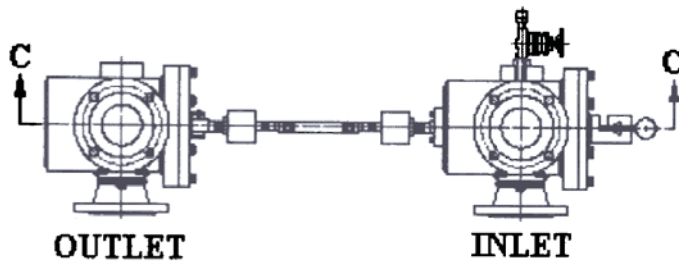

Section "C - C"

- 1.0 Open equalizing gate valve.
  - 1.1 Wait for pressure to equalize between vessels.
  - 1.2 **Due to capacitance effect larger vessels require several minutes to balance pressure.**
- 2.0 Turn "T" handle counterclockwise approximately 6-7 turns.
  - 2.1 **DO NOT FORCE PAST STOP.**
- 3.0 Push Ball Handle downward to unseat shoes.
- 4.0 Rotate Ball Handle 180°.
- 5.0 Release the Ball Handle and turn "T" handle clockwise until shoes are seated.
  - 5.1 **HAND TIGHTEN ONLY (20 IN-LB MAX).**
- 6.0 Close the equalizing gate valve.



Clark-Reliance Corporation  
16633 Foltz Parkway  
Strongsville, Ohio 44149  
p 440-571-1500 f 440-238-8828  
[www.clark-reliance.com](http://www.clark-reliance.com) | [sales@clark-reliance.com](mailto:sales@clark-reliance.com)